
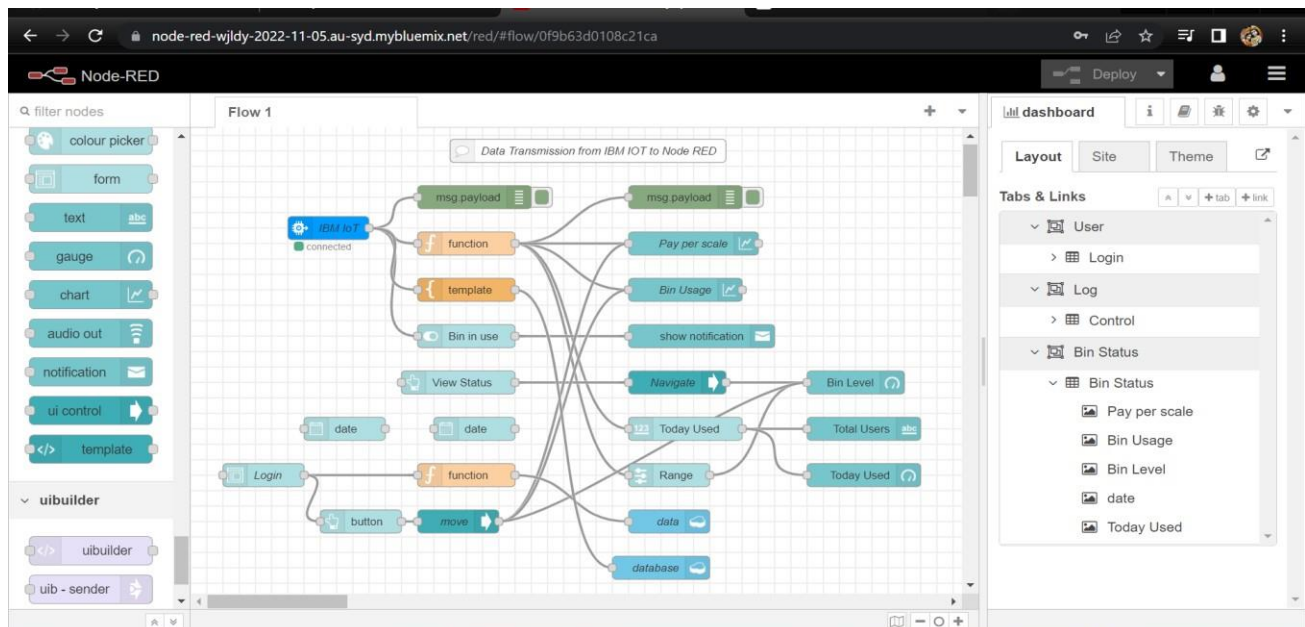


Delivery of Sprint – 3


Node Red Connection to IBM Cloudant

Date	5 November 2022
Team ID	PNT2022TMID09316
Project Name	Smart Waste Management for Metropolitan Cities - IOT

1. Node-RED Connection setup for data transmission from IBM Watson IOT platform to Node-RED dashboard.

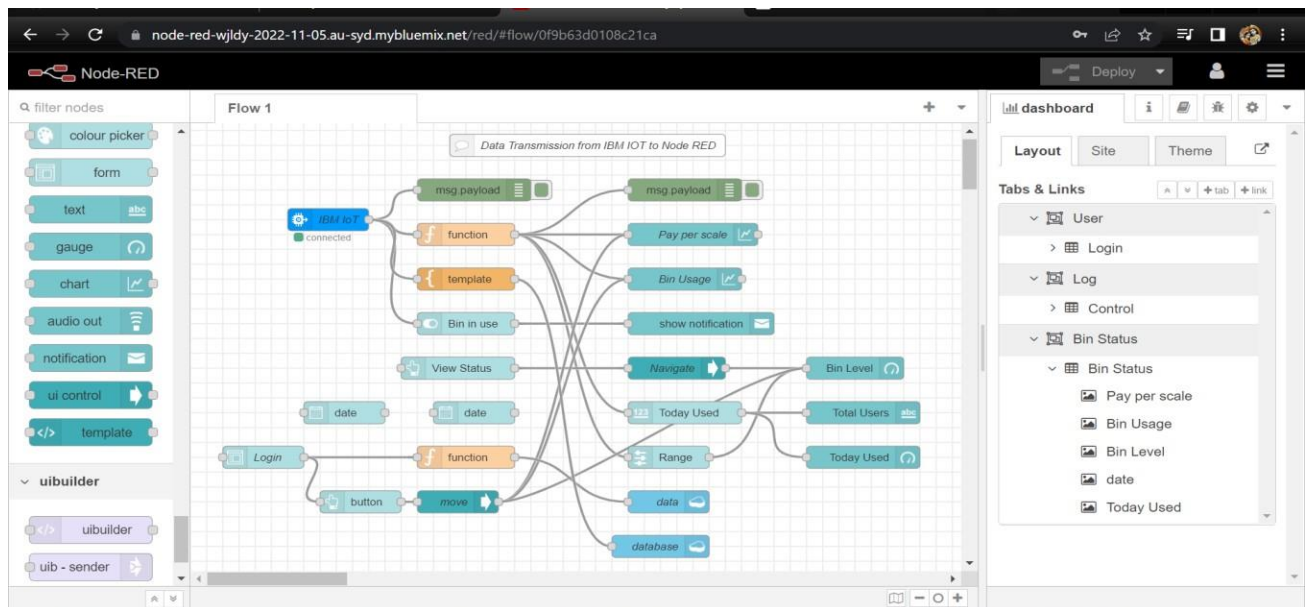

2. Simulate Wokwi connection to transmit data from wokwi account to IBM Watson IOT platform and then to Node Red dashboard.

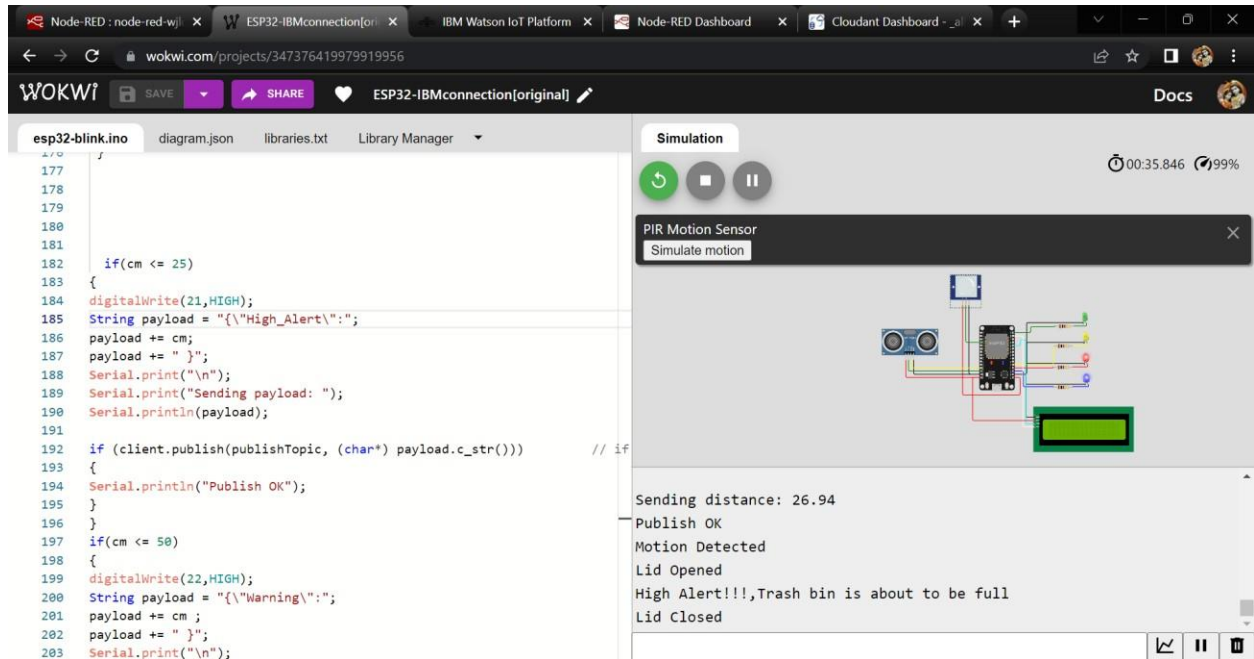

The screenshot shows the Wokwi IDE interface. On the left, the code for `esp32-blink.ino` is displayed, featuring logic for a PIR motion sensor that sends JSON payloads to an MQTT topic. The right panel shows a simulation of the hardware and a log of the simulated events.

```
177
178
179
180
181
182 if(cm <= 25)
183 {
184   digitalWrite(21,HIGH);
185   String payload = "{\"High_Alert\":\"";
186   payload += cm;
187   payload += " }";
188   Serial.print("\n");
189   Serial.print("Sending payload: ");
190   Serial.println(payload);
191
192   if (client.publish(publishTopic, (char*) payload.c_str())) // if
193   {
194     Serial.println("Publish OK");
195   }
196 }
197 if(cm <= 50)
198 {
199   digitalWrite(22,HIGH);
200   String payload = "{\"Warning\":\"";
201   payload += cm;
202   payload += " }";
203   Serial.print("\n");
```


Simulation

PIR Motion Sensor

Simulate motion

Sending distance: 26.94
Publish OK
Motion Detected
Lid Opened
High Alert!!!,Trash bin is about to be full
Lid Closed


3. Data transfer to Watson IOT platform.

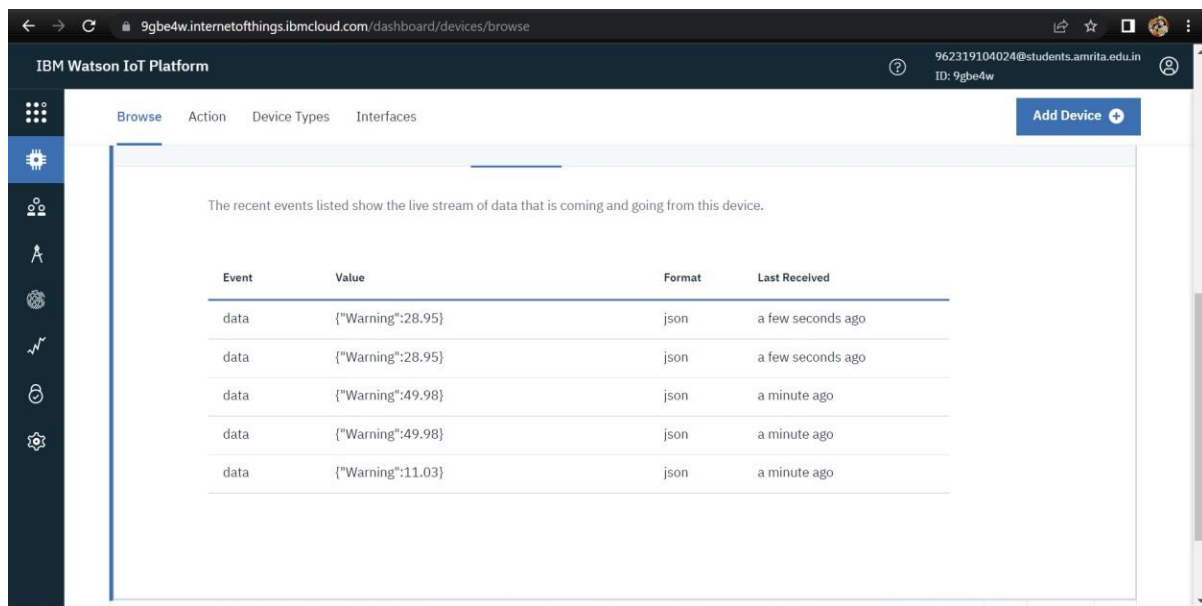

The screenshot shows the IBM Watson IoT Platform dashboard. The 'Browse' tab is selected, displaying a table of recent events for a device. The table lists events with their values, formats, and last received times.





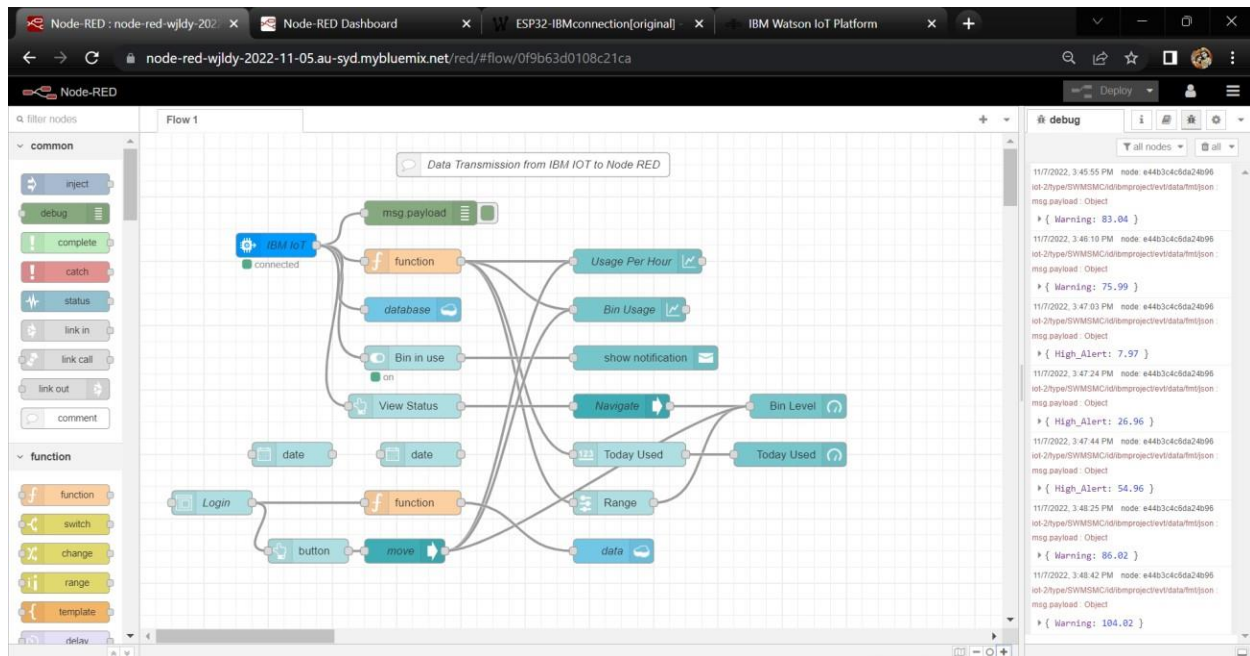







Event	Value	Format	Last Received
data	{"Warning":28.95}	json	a few seconds ago
data	{"Warning":28.95}	json	a few seconds ago
data	{"Warning":49.98}	json	a minute ago
data	{"Warning":49.98}	json	a minute ago
data	{"Warning":11.03}	json	a minute ago

4.Data transfer from IBM Watson IOT platform and wokwi to Node red.



5.Storing database in IBM cloudant DB.

The screenshot shows the IBM Cloudant Databases dashboard. The URL is ee6aeb4a-3006-499e-940e-af19edf953bf-bluemix.cloudant.com/dashboard.html#/all_dbs. The dashboard displays a table of databases under the heading "Your Databases".

Name	Size	# of Docs	Partitioned	Actions
login_credentials	13.7 KB	111	No	  
noderedwjldy20221105	37.4 KB	4	No	  
sample	59.4 KB	351	No	  
sensor_data	15.7 KB	90	No	  

Showing 1-4 of 4 databases. Databases per page 20

id	key	value
0198213c192cb2c244cc2433f1...	0198213c192cb2c244cc2433f1...	{ "rev": "1-cde2dd17c519394df...
0198213c192cb2c244cc2433f1...	0198213c192cb2c244cc2433f1...	{ "rev": "1-d26c5b40891e13c6c...
0198213c192cb2c244cc2433f1...	0198213c192cb2c244cc2433f1...	{ "rev": "1-cde2dd17c519394df...
0198213c192cb2c244cc2433f1...	0198213c192cb2c244cc2433f1...	{ "rev": "1-f96eb0460bc16cfab0...
1a921f21cbe229b86f599acb45...	1a921f21cbe229b86f599acb45...	{ "rev": "1-7226f08794cd47b7c...
1a921f21cbe229b86f599acb45...	1a921f21cbe229b86f599acb45...	{ "rev": "1-1bdd9a985bd56cf9...
20a854e5445fa818e6c1de049...	20a854e5445fa818e6c1de049...	{ "rev": "1-7226f08794cd47b7c...
20a854e5445fa818e6c1de049...	20a854e5445fa818e6c1de049...	{ "rev": "1-3ad288ecad57f039e...
20a854e5445fa818e6c1de049...	20a854e5445fa818e6c1de049...	{ "rev": "1-1bdd9a985bd56cf9...
298ed6fhd9b3b815f5ac7c061e...	298ed6fhd9b3b815f5ac7c061e...	{ "rev": "1-4e7240f6e5307a1h9...

6.Data is stored in JSON format

```

1 {
2   "_id": "0198213c192cb2c244cc2433f1802b91",
3   "_rev": "1-cde2dd17c519394df774738c495f8b",
4   "topic": "iot-2/type/SWMSMC/id/ibmproject/evt/data/fmt/json",
5   "payload": {
6     "Warning!!": "244.971eft"
7   },
8   "deviceId": "ibmproject",
9   "deviceType": "SWMSMC",
10  "eventType": "data",
11  "format": "json"
12 }

```

